

Dinghy Section Video Camera



Before taking out on the water





Make sure Camera is charged.

Make sure that the back door is securely closed.

Sign the Camera out from the Office

Always Return to the Office after use.

Basic Operation

	<ul style="list-style-type: none">• Remove the lens Cap
	<ul style="list-style-type: none">• Flip out the screen to switch on• Close the screen to switch off.• The Screen is a Touch Screen• Press PLAY to replay a recording.
	<ul style="list-style-type: none">• Red Button Start/Stop Recording• Top Button Zoom in/Out
	<ul style="list-style-type: none">• View of Touch Screen

Accessing the Power and Video Ports



To Open the door to access the ports,

First press the Spring button (indicated here)



With the Spring Button pressed.

Slide the Door.

It will only slide approx. 1cm.

Now the Door should Hinge open.

Be firm but don't force the door.



Once open the camera has the following ports.

- 1) Mini HDMI port to plug in to TV.
- 2) A Micro USB to plug into a computer (and to recharge the camera)
- 3) A 3.5mm Jack to plug in a RGB cable.
- 4) An SD card slot with a 64GB card.

To Charge the Camera



To charge the Camera, open the door at the back.



The Camera Charges through the USB Cable.

Either

1) Connect the USB to the Charging PSU and Mains Plug.

OR

2) Connect the USB to a computer or phone charger.

